



Dell Latitude E5410 Dell Latitude E5410 keyboard Replacement

How to replace the keyboard on your Dell Latitude E5410 laptop.

Written By: Megan Perrizo



INTRODUCTION

This guide will show you how to replace the Dell Latitude E5410 keyboard.



TOOLS:


- [JIS Driver Set](#) (1)
- [iFixit Opening Tools](#) (1)



PARTS:

- [Dell Latitude E5410 Keyboard](#) (1)
-

Step 1 — Dell Latitude E5410 keyboard

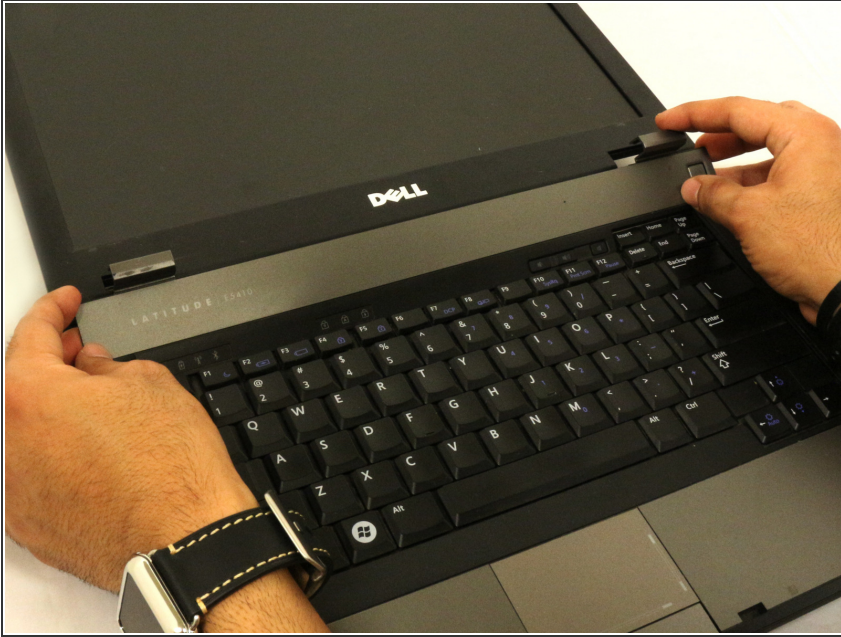


- Have your laptop ready with the screen pulled all the way down parallel to the bottom of the laptop.

Step 2




- Use the spudger to remove the flat part right above the keyboard.
- Inside, you will notice that there are a couple of screws that will need to be removed.

Step 3

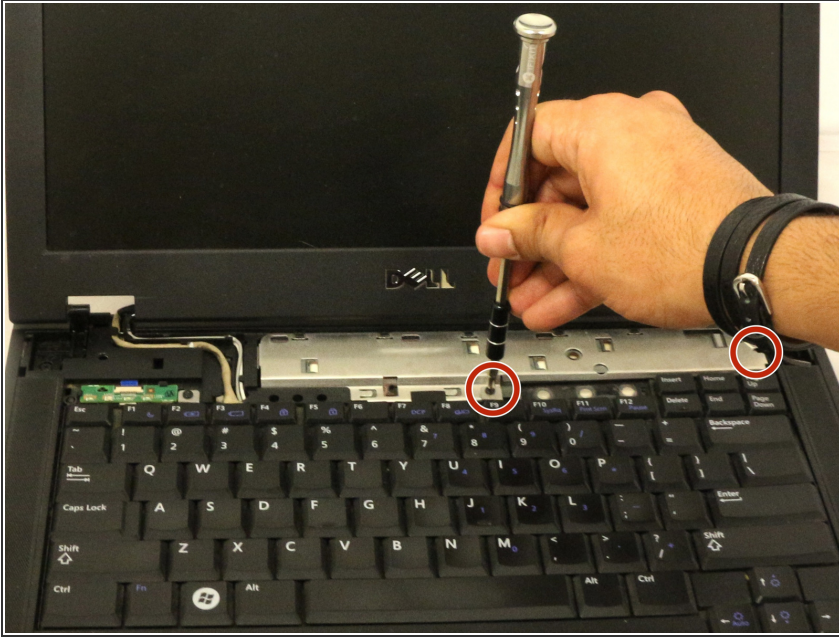

- Use the Phillips screwdriver to remove both screws. The screw in the middle is 3.85mm and the screw in the middle is 8.66mm.

Step 4

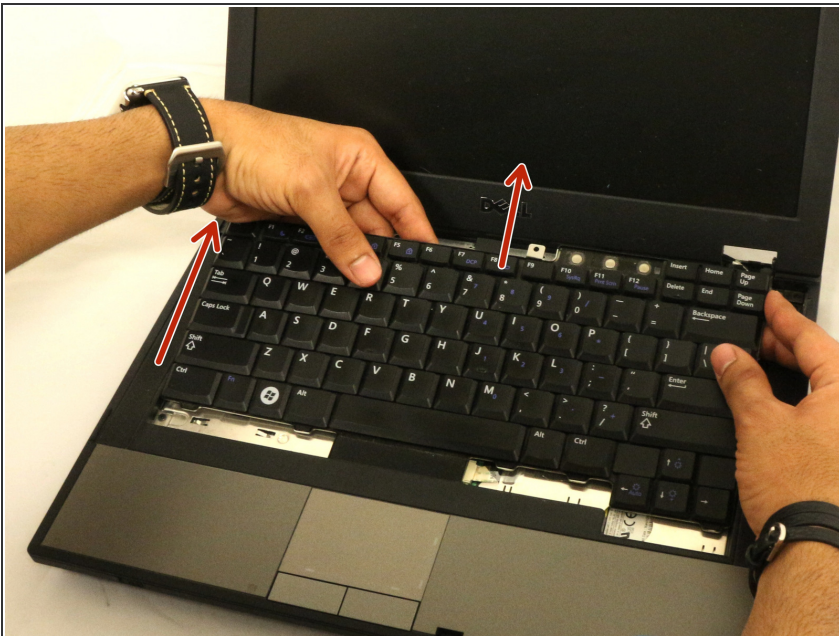

- Grab the keyboard near the top and pull up and towards the screen. The keyboard should come out.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-19 01:26:00 PM.